

LEVER HANDLES

INSTALLATION INSTRUCTIONS DUMMY LEVER - STAINLESS



Regularly clean handles using a microfibre cloth and warm water.




Avoid using abrasive cleaners, as they can damage the product's coating.

Installation Cut-Out Guide

Please note:

1. Diagram is not to scale
2. This lever will fit 35mm to 45mm door thicknesses
3. Handle height recommended is 900-1000mm from floor to center of drill hole

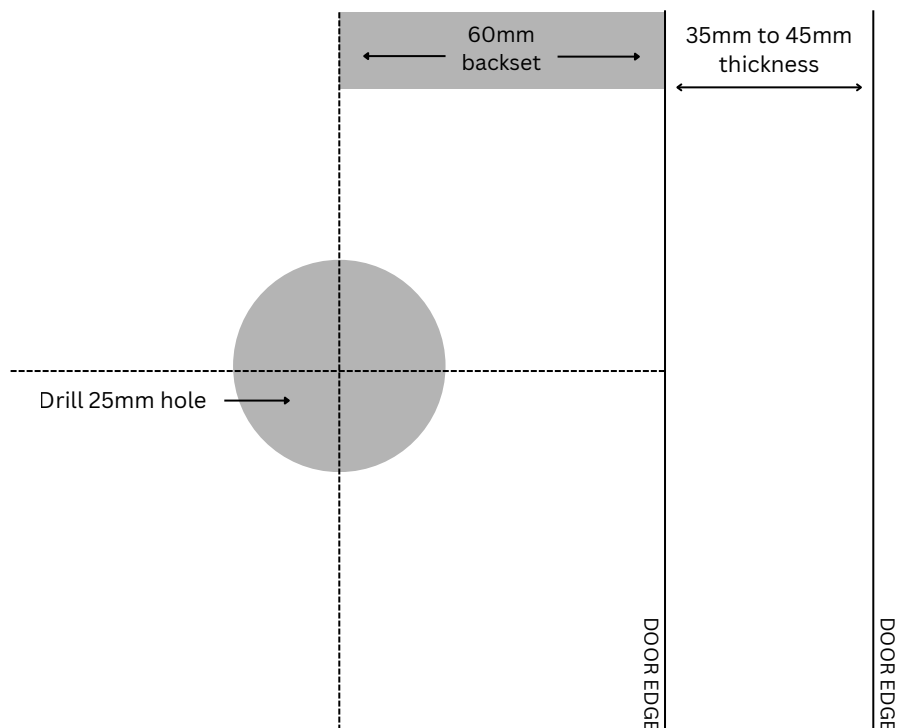

Disclaimer:


This handle must be installed by a licensed and qualified tradesperson. Improper installation may result in damage to the product or surrounding materials and may affect functionality.

Please note that various factors—including door type, thickness, alignment, environmental conditions, and compatibility with existing hardware—can impact the suitability and performance of this handle. It is the responsibility of the installer to assess these factors prior to installation.

We do not accept liability for issues arising from incorrect installation, misuse, or circumstances beyond our control.

1

- Use the template as a guide (not to scale) to mark the centre point for the 25mm hole.
- Drill a 25mm hole through the door at the centre point.

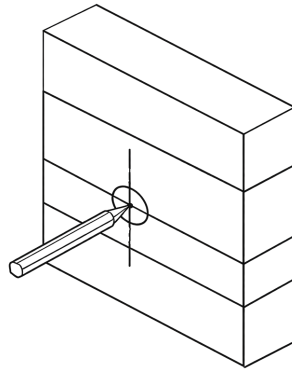

2

- Position the plate onto the back of the door.
- Slide the lever handle onto the spindle until it sits flush against the door. If required, slightly loosen the grub screw on the lever to allow the spindle to slide fully into place. Once positioned correctly, tighten the grub screw to secure the lever.
- Pilot drill 4 x holes through the mounting plate then secure with the provided screws.

