

LEVER HANDLES

INSTALLATION INSTRUCTIONS

DUMMY



Regularly clean handles using a microfibre cloth and warm water.




Avoid using abrasive cleaners, as they can damage the product's coating.

Installation Cut-Out Guide

Please note:

1. Diagram is not to scale
2. This lever will fit 32mm to 45mm door thicknesses
3. Handle height recommended is 900-1000mm from floor to center of drill hole

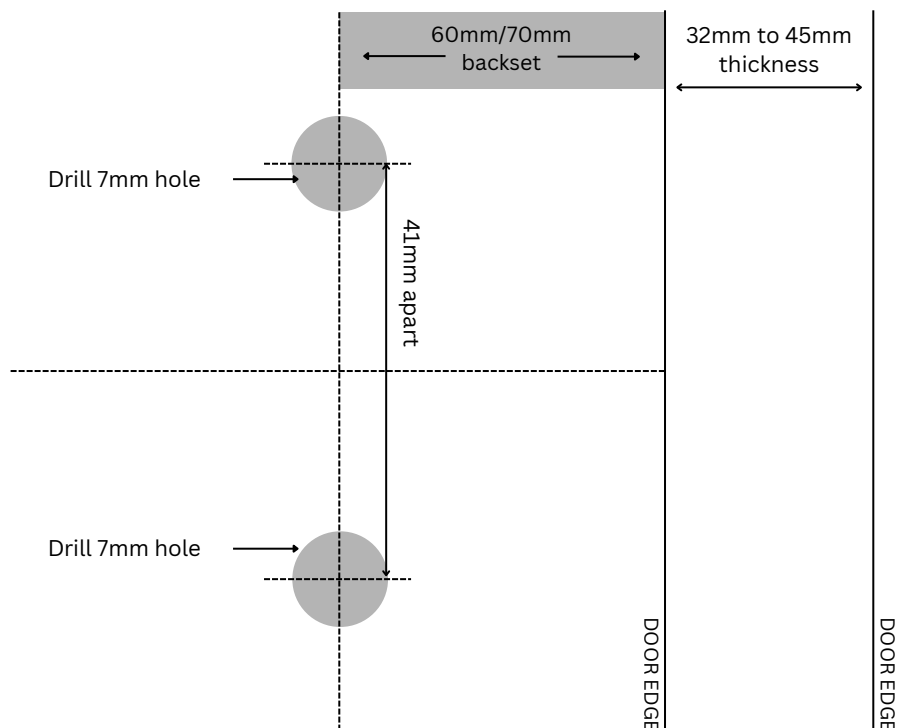

Disclaimer:


This handle must be installed by a licensed and qualified tradesperson. Improper installation may result in damage to the product or surrounding materials and may affect functionality.

Please note that various factors—including door type, thickness, alignment, environmental conditions, and compatibility with existing hardware—can impact the suitability and performance of this handle. It is the responsibility of the installer to assess these factors prior to installation.

We do not accept liability for issues arising from incorrect installation, misuse, or circumstances beyond our control.


1

- Use the template as a guide (not to scale) to mark the centre points for the two holes 41mm apart.
- Pilot drill each hole.
- Drill through two 7mm holes

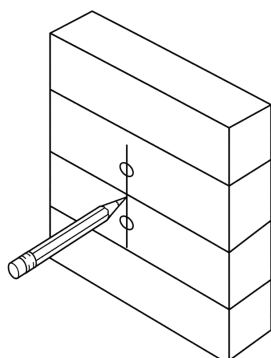

2

- Screw the metal sleeves onto the lever until they are secure.
- Once fitted correctly, the lever should look like the picture below.

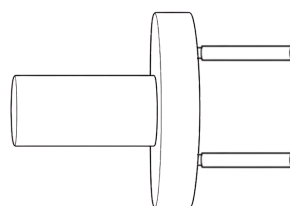

3

- Position the handle onto the door.
- Place the supplied screw through the provided washer.
- Using a screwdriver, tighten the screw into the handle until it is secure.
- Ensure the handle is firmly fixed to the door before use.

