

Handleset Installation Instructions

Read the instructions carefully before you begin installation. They provide important information on how to prepare your door and install your handleset properly.


BEFORE PROCEEDING:

- Check your door thickness. Be sure your door thickness is between 35mm to 50mm (up 57mm if equipped with thick door kit) if equipped with "thick door kit"
- Confirm the backset of your door to be either 2-3/8" (60mm) or 2-3/4" (70mm)
- Match your Handleset latches backset with your backset on your door.


TOOLS NOT INCLUDED BUT NEEDED FOR NEW INSTALLATION:

- Phillips head screwdriver.
- Power Drill and 10mm drill bit, 25mm drill bit, 54mm hole saw or drill bit.
- Hammer, and 25mm Chisel..


1. MARK DOOR

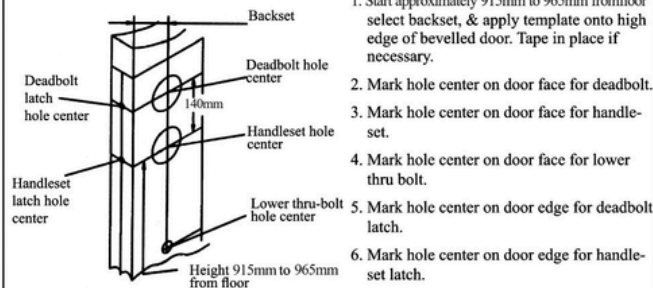


2. BORE FIVE (5) HOLES

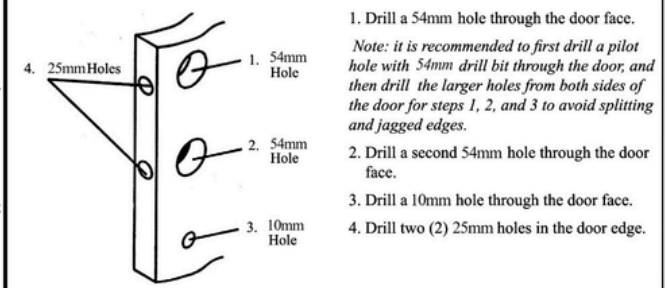


3. MORTISE DOOR EDGE FOR LATCHES

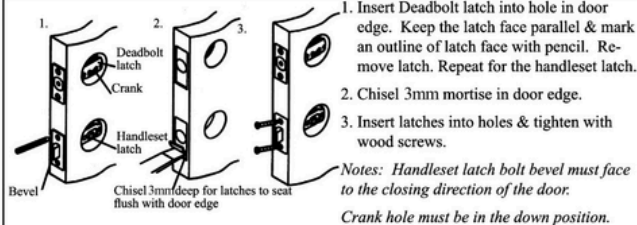


4a. MOUNT EXTERIOR HANDLESET

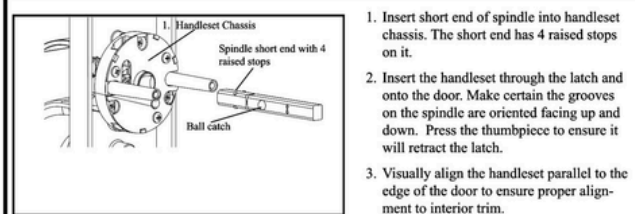


4b. OUTSIDE INSTALLATION

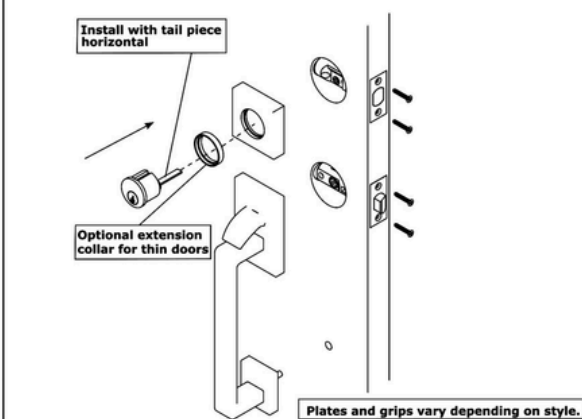

4c. INSIDE INSTALLATION

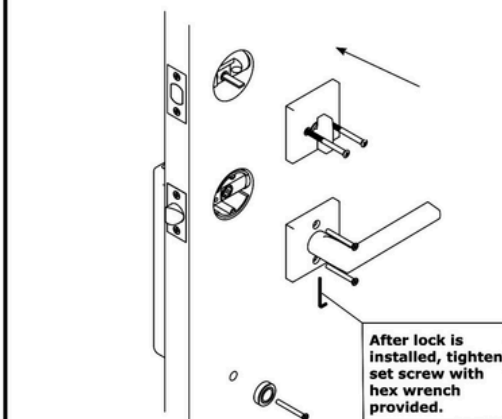


5. INSTALL STRIKES ON JAMB

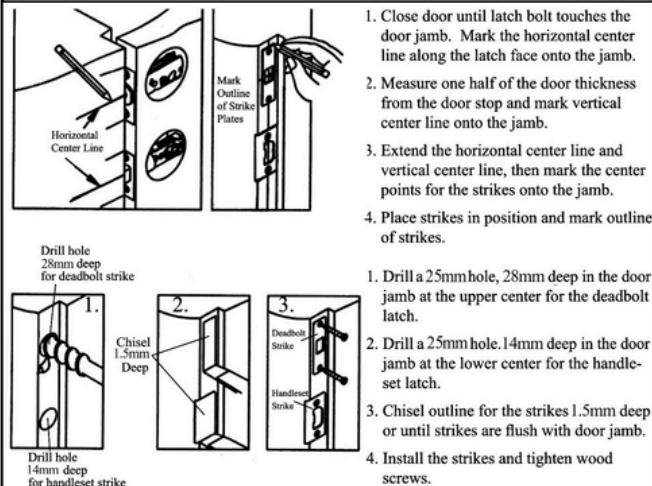


6a. ADJUSTABLE LATCH FOR HANDLESET

Note: Most latches can be adjusted between either 60mm or 70mm backset. To adjust from 60mm to 70mm backset, follow the steps in the diagram below.

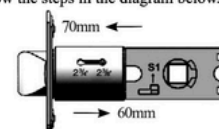

1. Slide up S1 button and hold it.
2. Push down 60mm button to slide to 70mm until it stops.
3. Do one more slide to the 60mm until it stops.

6b. ADJUSTABLE LATCH FOR DEADBOLT

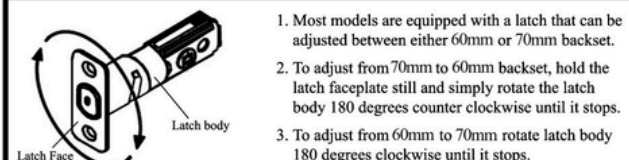

Not to scale

