



This lever will fit 35mm to 45mm door thickness


LEVER SET INSTALLATION INSTRUCTIONS AND TEMPLATE

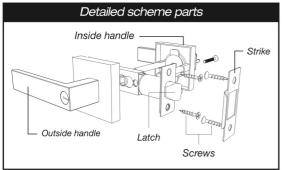




Door preparations

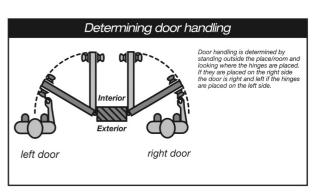

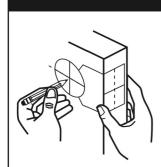


HOLE MARKING


Place the template and fold on the door edge, check the distances and centers to drill. Select the distance from the edge of the door. It is recommended to install 90 to 100 cm regarding of floor.

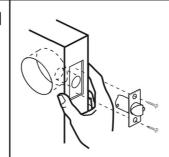

HOLES

Carefully punch the door with a drill on the previously marked centers, doing first the larger diameter to 54mm (21/8") and then the center of the edge of the door of 24mm (15/16").

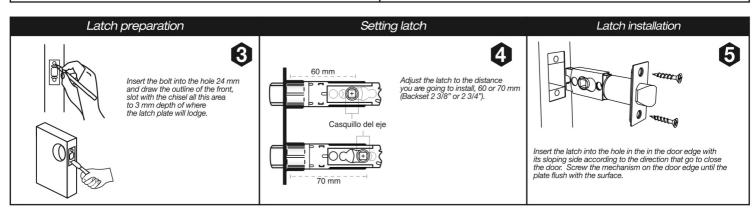

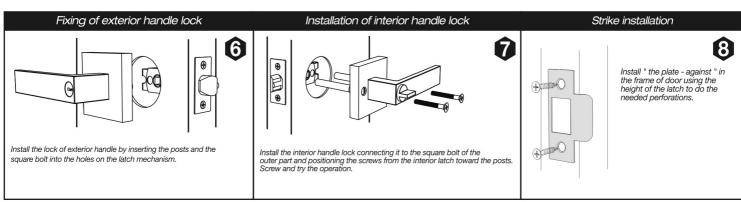

Template

