


This lever will fit 32mm to 45mm door thickness


Step 1. Door Preparation

- Fold the supplied template and position template on door edge.
- Mark centre of all three holes as indicated on template.
- Pilot drill all three holes.
- Drill 25mm hole through door.
- Drill two 10mm holes through door.

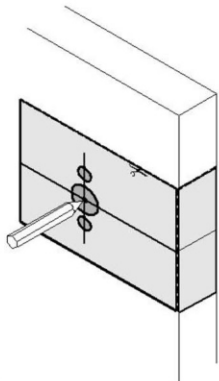

Step 2. - Install posts

- Remove rosette-cap from lever assembly.
- Insert post screws (M4 x 19mm) through lever assembly and screw into posts and tighten.

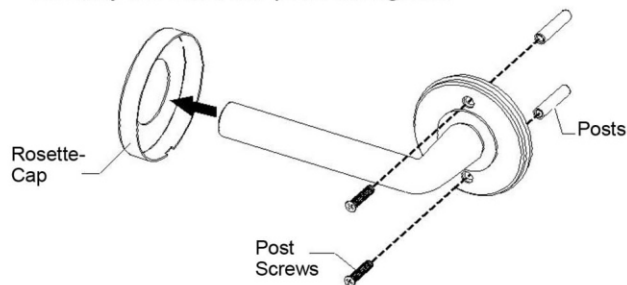


Step 3. Screw Selection

- Measure door thickness and select correct mounting screws as per table below:

DOOR THICKNESS	MOUNTING SCREW
30 - 41mm	M4 x 25 mm LONG
41 - 45mm	M4 x 35 mm LONG


Step 4. Mounting Plate Installation

- Place lever assembly onto outside of door.
- Orientate mounting plate with groove facing the hinge side of door and place on inside of door.
- Hex screw on lever may need to be loosened to enable mounting plate to sit on door face.
- Insert correct mounting screws selected in STEP 3 through top and bottom holes of mounting plate. Tighten both screws.

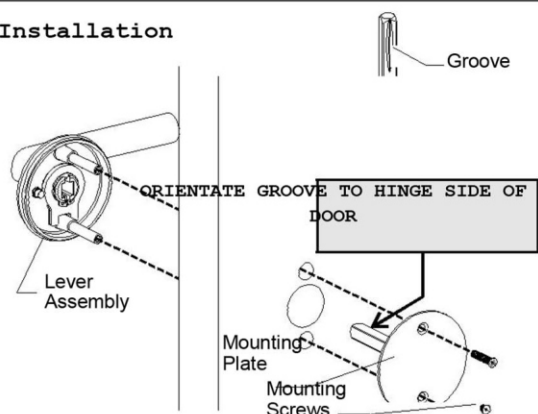


Step 5. Door Screw Installation

- Check whether lever assembly is sitting horizontally. If required loosen mounting screws, straighten lever assembly and re-tighten screws.
- Once lever is horizontal, screw in two door screws (#6 x 19mm) through mounting plate.

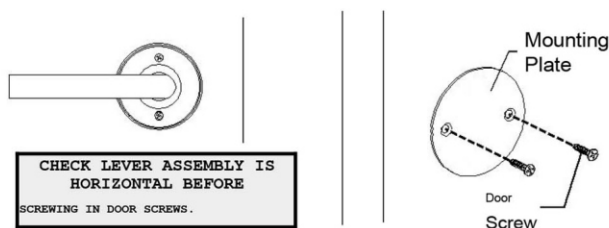

Step 6. Re install Rosette-cap

- Re-install Rosette-Cap onto lever assembly.
- Push the cap until it is flush with the door face.

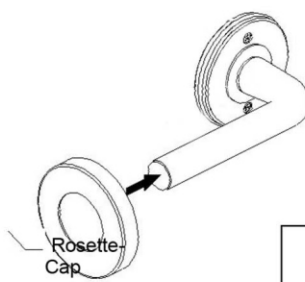

DOOR-TEMPLATE

Fold on dotted line
and fit on door edge

