

LEVER HANDLES

INSTALLATION INSTRUCTIONS LONG PLATE DUMMY - LEVER



Regularly clean handles using a microfibre cloth and warm water.




Avoid using abrasive cleaners, as they can damage the product's coating.

Installation Cut-Out Guide

Please note:

1. Diagram is not to scale
2. This lever will fit 35mm to 45mm door thicknesses
3. Handle height recommended is 900-1000mm from floor to center of the lever.

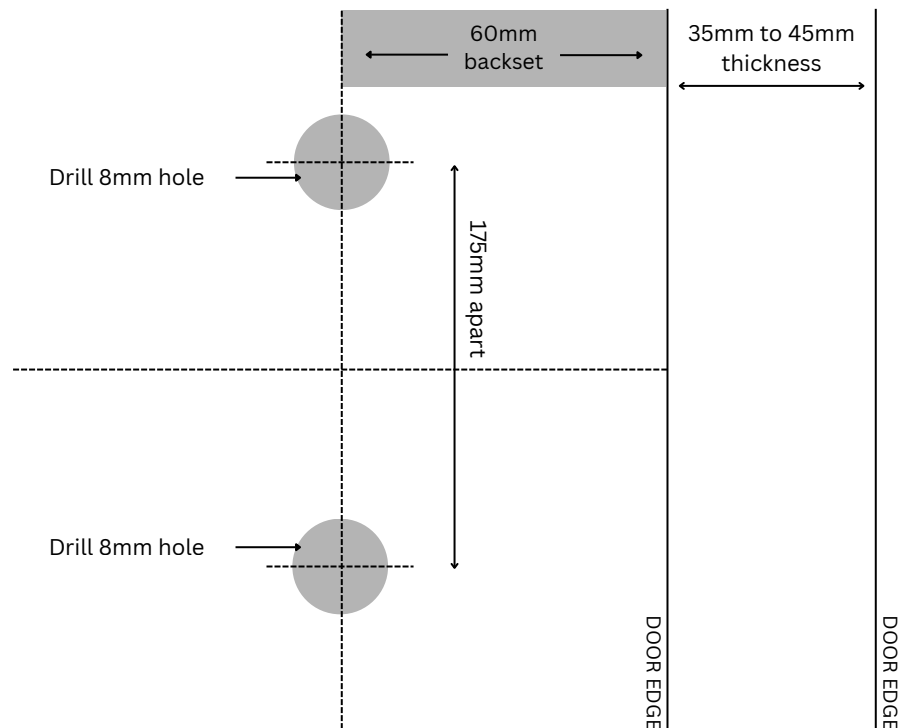

Disclaimer:


This handle must be installed by a licensed and qualified tradesperson. Improper installation may result in damage to the product or surrounding materials and may affect functionality.

Please note that various factors—including door type, thickness, alignment, environmental conditions, and compatibility with existing hardware—can impact the suitability and performance of this handle. It is the responsibility of the installer to assess these factors prior to installation.

We do not accept liability for issues arising from incorrect installation, misuse, or circumstances beyond our control.


1

- Use the template as a guide (not to scale) to mark the centre points for the two holes 175mm apart.
- Pilot drill each hole.
- Drill through two 8mm holes

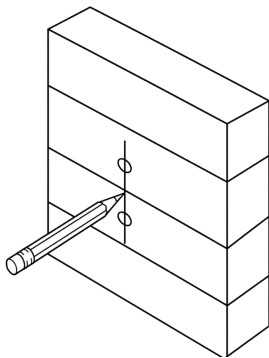

2

- Insert the grub screws (small screws) into both threaded holes on the handle.
- Screw the metal sleeves onto both grub screws on the knob until they are secure.
- Once fitted correctly, the knob should look like the picture below.

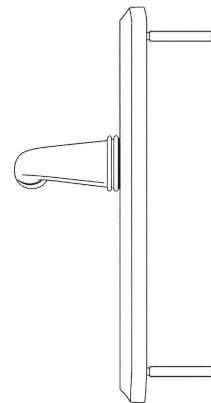

3

- Position the handle onto the door.
- Place the supplied screw through the provided washer.
- Using a screwdriver, tighten the screw into the handle until it is secure.
- Ensure the handle is firmly fixed to the door before use.

