

## LEVER HANDLES

### INSTALLATION INSTRUCTIONS PRIVACY LEVER - STAINLESS



Regularly clean handles using a microfibre cloth and warm water.




Avoid using abrasive cleaners, as they can damage the product's coating.

#### Installation Cut-Out Guide

Please note:

1. Diagram is not to scale
2. This lever will fit 35mm to 45mm door thicknesses
3. Handle height recommended is 900-1000mm from floor to center of drill hole

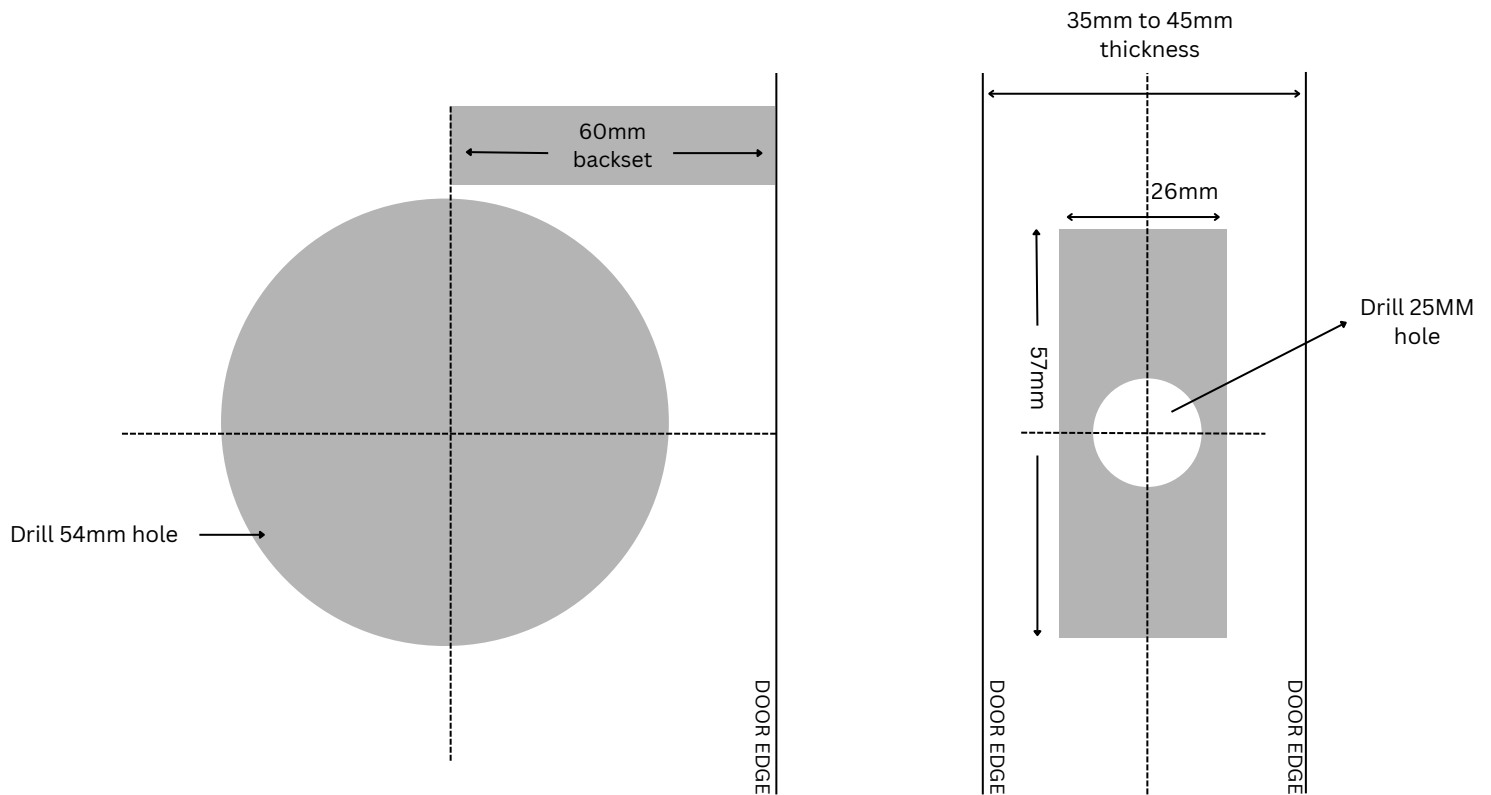

#### Disclaimer:


This handle must be installed by a licensed and qualified tradesperson. Improper installation may result in damage to the product or surrounding materials and may affect functionality.

Please note that various factors—including door type, thickness, alignment, environmental conditions, and compatibility with existing hardware—can impact the suitability and performance of this handle. It is the responsibility of the installer to assess these factors prior to installation.

We do not accept liability for issues arising from incorrect installation, misuse, or circumstances beyond our control.


1

- Use the template for reference (NOT TO SCALE) to mark the centre of the 54mm hole on both sides of the door at a 60mm backset.
- Drill the 54mm hole from both sides of the door to prevent splintering.
- Mark the horizontal centre line for the 25mm latch hole, then mark the centre of the door thickness.
- Drill the 25mm hole into the edge of the door, centred on the thickness, ensuring it is straight.

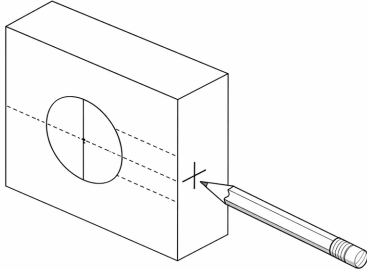


2

- Remove the rose from the loose side of the lever set and remove both screws with a screwdriver.

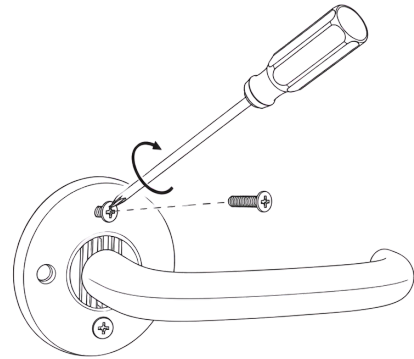



3

- Remove the plastic stabiliser and insert the latch into the door edge. Mark around the faceplate.
- Remove the latch and carefully chisel a recess so the faceplate sits flush with the edge of the door.
- Reinsert the latch, ensuring the curved side faces the direction the door closes and the thread for the privacy pin is on the correct side. Position the plastic stabiliser inside the larger hole and feed the latch through.
- Pre-drill the fixing holes, place plate over latch, then secure using the supplied screws.

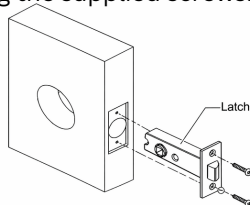


4

- Place spindle through the latch with the tab going through first.
- Position handle with cylinders through the plastic stabiliser and onto the spindle. The grub screw underneath the lever may need to be loosened to allow spindle to go through.

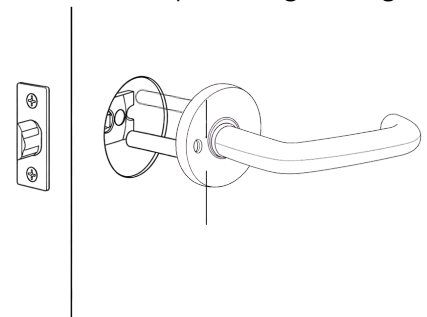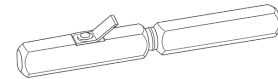

5

- Install the other lever by connecting it to the spindle and positioning it against the door.
- Insert the fixing screws through the holes on either side of the handle and hand-tighten them into the posts until secure.
- Place the privacy pin on the internal side of the door and screw into place.

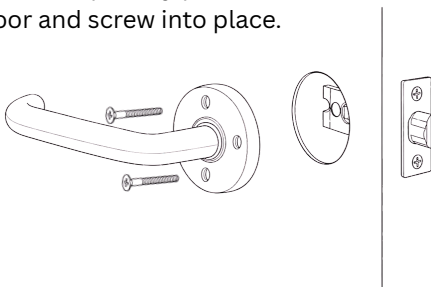

6

- Close the door gently so the latch rests on the jamb and mark the center of the latch. This is where the strike plate will go.
- Mark the center point for the latch and drill a 25mm hole in the jamb about 12mm deep.
- Place the strike plate on the jamb, trace around it, and chisel out the recess so it sits flush.
- Screw the strike plate in place using the 2 supplied screws.

