

LEVER HANDLES

INSTALLATION INSTRUCTIONS LONG PLATE PRIVACY - KNOB



Regularly clean handles using a microfibre cloth and warm water.




Avoid using abrasive cleaners, as they can damage the product's coating.


Installation Cut-Out Guide

Please note:


1. Diagram is not to scale
2. This lever will fit 32mm to 45mm door thicknesses
3. Handle height recommended is 900-1000mm from floor to center of the knob

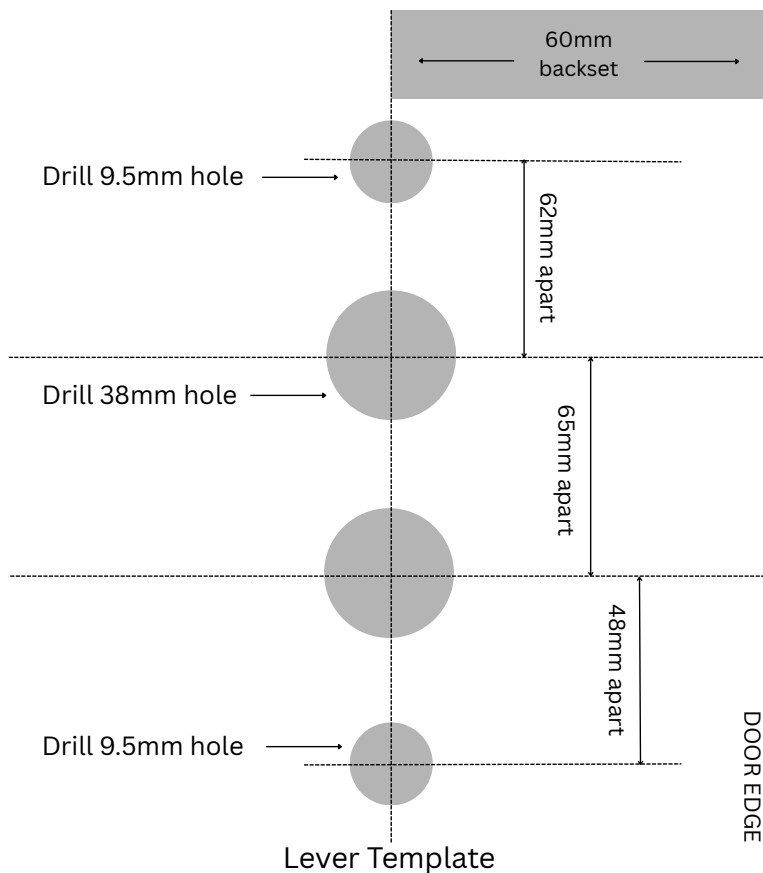

Lever Template

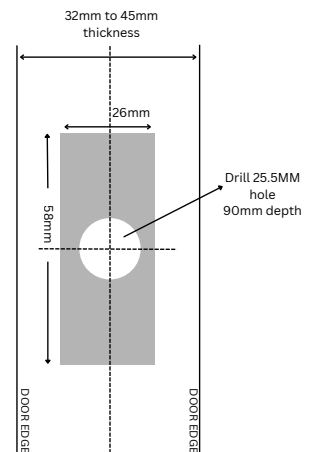

Latch Template

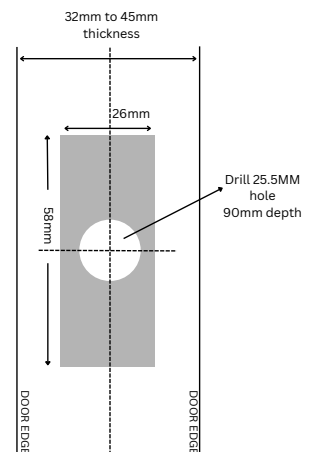

Bolt Template

Disclaimer:


This handle must be installed by a licensed and qualified tradesperson. Improper installation may result in damage to the product or surrounding materials and may affect functionality.

Please note that various factors—including door type, thickness, alignment, environmental conditions, and compatibility with existing hardware—can impact the suitability and performance of this handle. It is the responsibility of the installer to assess these factors prior to installation.

We do not accept liability for issues arising from incorrect installation, misuse, or circumstances beyond our control.


1

- Use the template for reference (NOT TO SCALE) to mark the centre of the 2 x 38mm holes at a 60mm backset from the edge of the door. Then mark the centre of the 2 x 9.5mm holes in the positioning as per the template.
- Drill the 2 x 38mm holes and the 2 x 9.5mm holes from both sides of the door to prevent splintering.

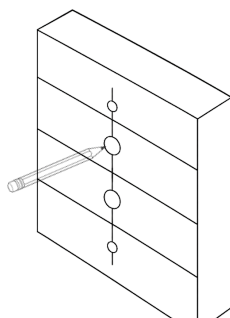


2

- Mark the horizontal centre line for the 25mm latch and bolt hole, then mark the centre of the door thickness.
- Drill the 2 x 25mm holes into the edge of the door, centred on the thickness, ensuring it is straight. Drill to a 90mm depth.

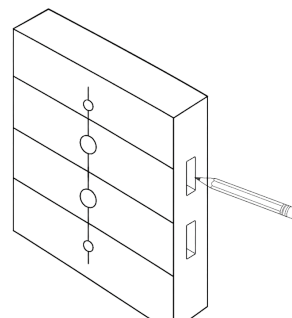


3

- Insert the latch and bolt and mark around the faceplate. Remove both from holes.
- Chisel a recess so the faceplate sits flush with the door edge.
- Insert the latch and bolt again, making sure the curved side of the latch faces the direction the door closes.
- Pre-drill holes and secure with the supplied screws.

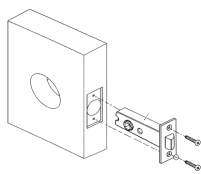


- position spindle centrally within the latch and bolt.

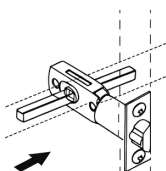


4

- Insert the grub screws (small screws) into both threaded holes on the handle.
- Screw the metal sleeves onto both grub screws on the knob until they are secure.
- Once fitted correctly, the knob should look like the picture below.

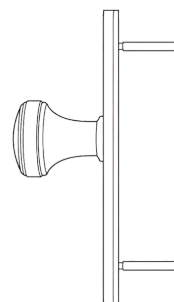

5

- Position both sides of the handle onto the door.
- Insert the supplied screws through the top and bottom fixing holes and into the corresponding holes on the opposite side of the handle.
- Using a screwdriver, tighten the screw until it is secure.
- Ensure the handle is firmly fixed to the door before use.

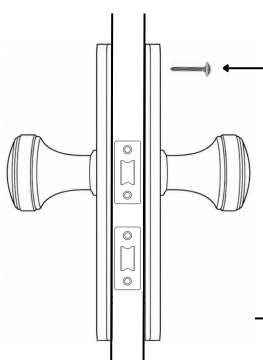

6

- Close the door gently so the latch rests on the jamb and mark the center of the latch and bolt. This is where the strike plates will go.
- Drill a 25mm hole in the jamb about 12mm deep.
- Place the strike plates on the jamb, trace around it, and chisel out the recess so they sit flush.
- Screw the strike plates in place using the 2 supplied screws.

